

Borough of Danville Building
Department
463 Mill Street
Danville PA, 17821
Phone: 570-275-3091 ext. 1
Fax: 570-275-2656

Building Demolition Requirements

Electrical Service

Verify the termination of any/all electrical service (if applicable).

PPL 1-800-342-5775

Gas Service

Verify the termination of any/all gas service (if applicable).

UGI 1-800-276-2722

Water

When disconnecting the municipal water service, (to eliminate the possibility of system damage) prior to digging, please cut supply line on the structure side of the curb box leaving not less than 12" to enable future service.(any additional information can be obtained by the Danville Borough Municipal water plant at 570-275-1070.

Sewer

When disconnecting waste service please cut and cap lateral with approved method.

Please mark the location of disconnect and call the Municipal Waste Water Plant at 570-275-2731 to verify capping and log the location.

Once demolition is complete and lot is graded, final release from the Borough can be obtained.

Inspections can be scheduled by telephone or fax with a 24 -48 hour notification.

